

Frequently Asked Questions

FAQ 10027 How can I use theatre stack mode on a Tiger?

Theatre stack mode normally uses the last 4 of the 15 playbacks on a Pearl 2010. A Pearl Tiger has 10 playbacks but can be internally configured so that the last 4 faders will run the theatre stack. Alternatively you can use a Tiger Wing to access the 5 extra playbacks.

The easiest way to see how your tiger is currently configured (without opening the desk) is to use the diagnostic screen to see the mapping of the last 4 playbacks.

- 1) Switch the key to SYSTEM.
- 2) Select option A - Service.
- 3) Select option B - Diagnostic Screen.

You see a section of the screen displaying the level of the Playback Faders. The levels are shown in hexadecimal format 00 to FF (zero to full). As you move the playback faders you should see the levels change. The top line of this section shows levels for playbacks 1-10. The next line shows levels for playbacks 11-15.

In order to use theatre stack mode without a Tiger Wing, playbacks 7, 8, 9, 10 on the desk should drive the playback levels 12, 13, 14, 15 in the diagnostic screen.

Press the Up arrow to exit the diagnostic screen.

To change the configuration:

- 1) Turn off the console.
- 2) Remove the 3 screws under the front edge of the console.
- 3) Hinge the front panel up away from the screws.
- 4) Use the struts on each side to hold the console open.
- 5) The Analogue board is right in front of you mounted on the front panel.

The diagram below shows the locations of the 8 jumper links on the Pearl Tiger Analogue Board which control the mapping of playbacks 7, 8, 9, 10.

The 8 links are shown in the 1-2 position. This is the factory setting and requires a Wing in order to use the theatre stack.

The 8 links should be moved to the 2-3 position in order to use the theatre stack without a Wing.

